



JELD-WEN
WINDOWS & DOORS

SITELINE® POCKET & SASH PACK

QUICK REFERENCE GUIDE



SITELINE® QUALITY FOR REPLACEMENT PROJECTS



Easy to install, with a wide range of finishes available, JELD-WEN® Sitrine® pocket and sash pack options bring the versatility, innovation, and heightened aesthetics of Sitrine to any replacement project.

Sitrine is one of the most popular and comprehensive wood window lines available today. The addition of double-hung pocket, casement pocket, and double-hung sash pack options gives our customers more flexibility than ever for selecting the best wood windows for their building projects.

MEASURING INSTRUCTIONS

1. MEASURE THE WIDTH


- Measure the width between the side jambs (wood surface to wood surface) in three places: top, middle, and bottom. Pick smallest measurement.
- Temporarily remove jamb liners if necessary and avoid any stops, weatherstripping, balance cords, pulleys, etc.
- Ensure that the jamb depth of window frame is at least 3 1/4"

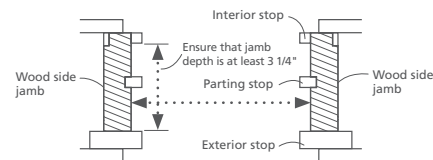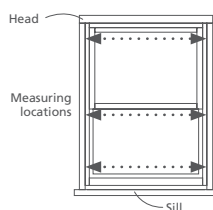


2. MEASURE THE HEIGHT

- Measure the height from the head to the sill in three places: left side, middle, and right side. Pick smallest measurement
- At the head, measure directly from the wood header, avoiding any stops, weatherstripping, and liners.
- At the sill, measure on the exterior side directly behind the sill stop at the highest point of the sloped sill.
- For sash pack replacement, measure from the exterior side of the central head stop straight down to the sill, as shown in the diagram. (This will be the area between the upper and lower sash.)

DOUBLE-HUNG POCKET

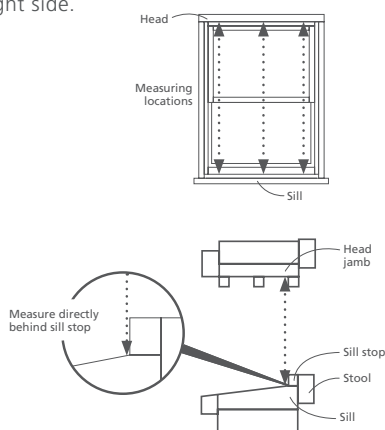


DOUBLE-HUNG SASH PACK

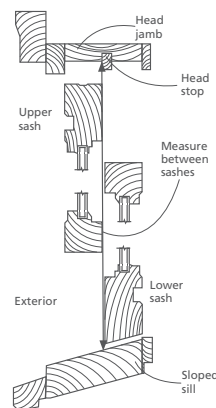

3. CHECK YOUR SILL ANGLE

- If installing your replacement window into a wood double-hung with a sloped sill, determine the slope angle.

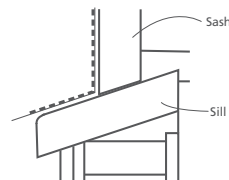



POCKET INSTALLATION GENERAL INSTRUCTIONS

1. Confirm measurements (you don't want to remove the old window just to find the new window is the wrong size).
2. Prep original frame (remove sash, blind stops, interior/exterior stops depending on whether you're installing from the interior/exterior).
3. Remove sash, head parting stop, and jamb covers of replacement window (for casement, don't remove sash to install window).
4. Install the pocket window frame.
5. Shim. Check for plumb, level, and square (very important).
6. Fasten the frame through the pre-drilled jamb.
7. Re-install the jamb covers, head parting stop, and sash (applies to double-hung only).
8. Check operation.
9. Seal the interior against air infiltration.

These instructions are meant as a general guide only. For complete installation instructions, please visit jeld-wen.com for downloadable files.





For more information, contact your JELD-WEN sales representative today.



For a complete copy of JELD-WEN's Limited Warranty and care and maintenance information, please visit jeld-wen.com or jeld-wen.ca or contact JELD-WEN at 1-888-JWHelpU (1-888-594-3578).

©2019 JELD-WEN, Inc. This publication and its contents are owned by or licensed to JELD-WEN, Inc. or its affiliates, and are protected by copyright, trademark, and other laws. Unauthorized use or duplication is prohibited. JELD-WEN and SITELINE are registered trademarks of JELD-WEN, Inc. JELD-WEN reserves the right to change product specifications without notice. Please visit our website at jeld-wen.com for current information. All rights reserved.

11-96843 01/19